

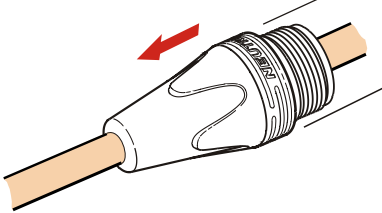
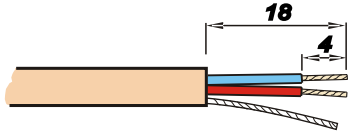
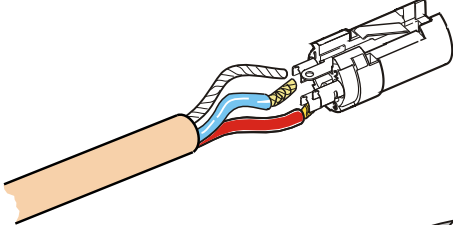
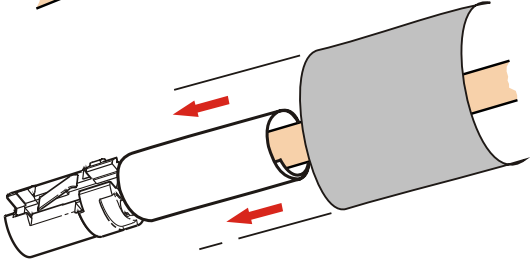
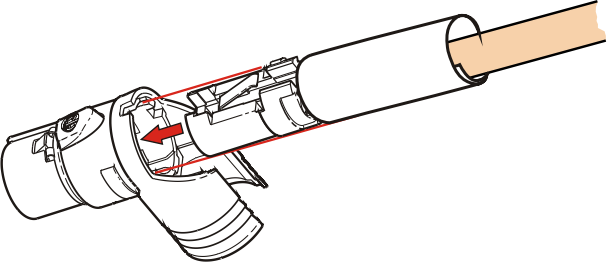
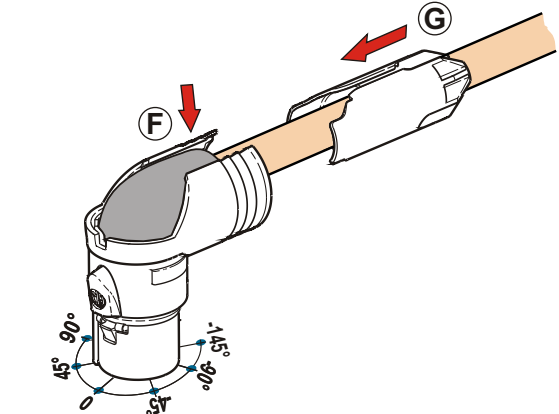


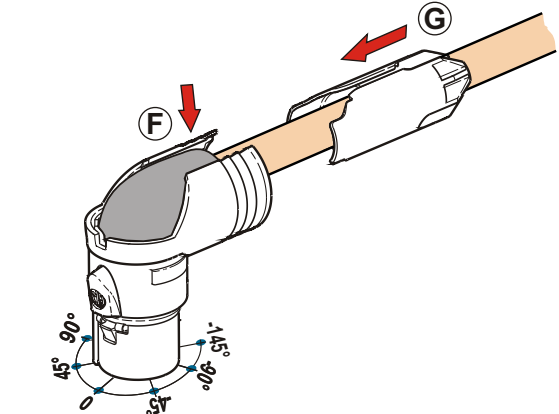

ASSEMBLY INSTRUCTION

NC*FRX & NC*MRX | XLR Cable Connector

- A**  Slide the boot onto the cable.
- B**  Prepare cable as shown.
- C**  Insert wires into the terminals and solder them.
- D**  Position the sleeve over the cables.
- E**  Slide insert into the housing until it snaps in.
Align insert with housing.
- F**  Position the cable.
- G**  Slide the chuck into the housing.
Pay attention to position chuck as shown.

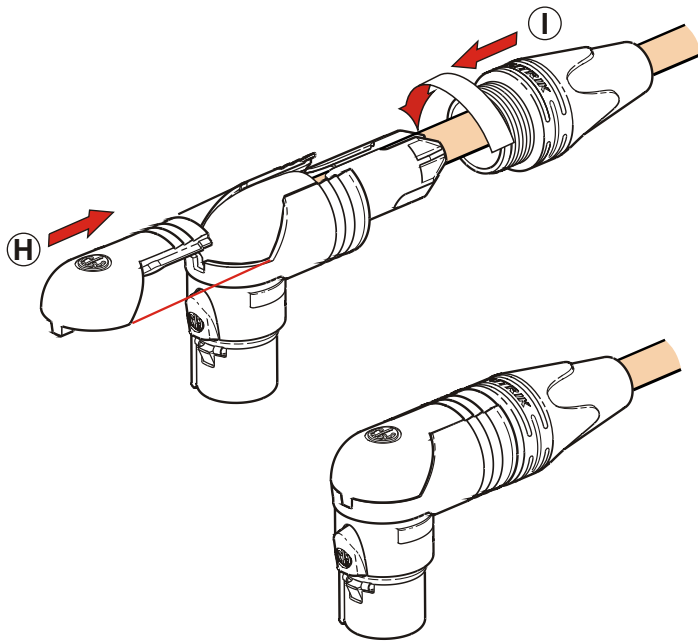


H Position the cover.

Before placing the cover choose the orientation of cable outlet by turning housing.

I Finish the assembly by turning the bushing onto the connector.

Disassembly of the insert

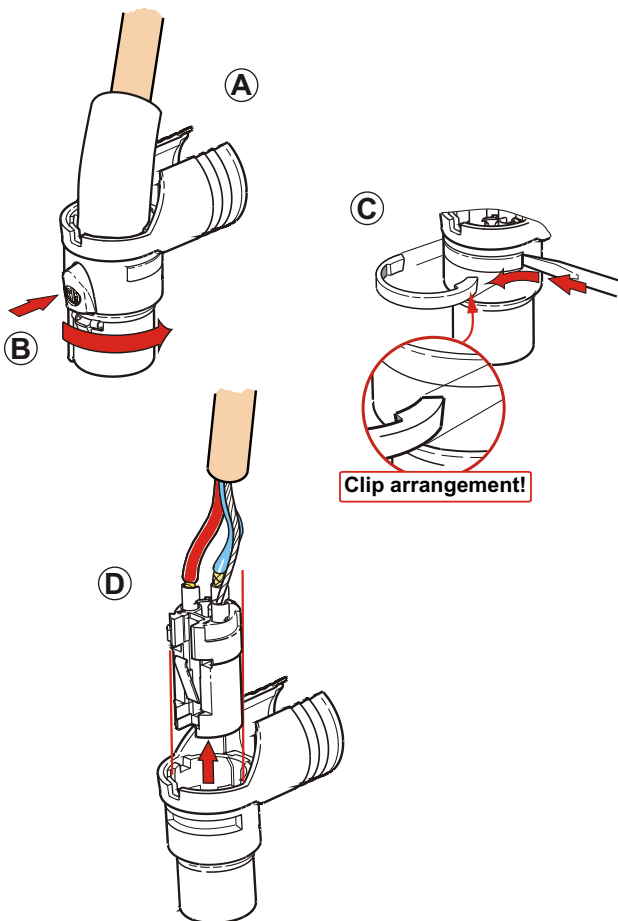

A Remove cover and chuck.

B Push latch and turn housing approx. a half turn until housing can be separated.

C Lift the locking clip by help of a screw driver.

D Remove insert.